

# 7-STAR<sup>®</sup>

## Universal Remote Control Replacement For Philips 3D LCD LED Smart TV



RMPH1

# 7-STAR<sup>★</sup>



# 7-STAR<sup>★</sup>

COMMON LCD/LED TV

REMOTE CONTROL

Compatible Types List

Due to too many Remote Control models, we only list some below. If your remote control is similar to the picture, then our remote can control it.99% models of Philips Series TV

2422 5490 01833	RC19335001	RC2023617/01
2422 5490 01834	RC19335003/01	RC19039001
2422 54900 01911	RC19335029-01	RC19042001
PH28 LCD TV	RC2031	RC7502
RC1205B/30063555	RC2048	RC7507
RC2512	RC2080	RC0301/01-47
RC1683701	RC25109/01	RCA00
RC1683801/01	RC7599	PHILIPSB
RC193365023-01H	RCB922	RC115300101
RC2023601	RCB925	RC19335004/01
RC2033601/01	RC8927	RC1153053-00
RC2034301-01	RC5536	RC7807
RC2034302-01	RCS20	SMART TXT
RC2034305/01B	RC7502	RC2882-01
RC2034312/01	RC2521	RC-19335014/01
RC2143606/01	RC2525	RC2835/01
RC2683204/01	RC2525/01	RC19335019/01
RC4344-01H	RC2529/01	RC19335020/01
RC4422/01	RC2533	RC19335021/01
RCA10U81FX	RC2541	RC19335009/01
TELEVISION	RC2543	RC19042003/01
RCO764/01	RC2563	RC19042008/01
RC7802-S	RC2582/01	RC19042009/01
RC7812-S	RC7808	RC19042011/01
RC7847	RC7812	RC19002 B
SAA3010	RC7940	RC19039001-01
RC6805	RC7952	RCO717-642
RC7802	RC7953	RC1683702/01
RC7805	RC7954	RC1152605/01
RC7806	RC7959	RC1112516/00
RCO770	RC7962	RCO764/01
RC19036002	RC7974	HE888
RC1904	RC283501	PHILIPS PIP
RC1904/001	RC283502	RC7533
RC19042004	RC283501	RC7535
RC19042011	RC2529	RC2001
RC19042013	RC2575	RC2006
RC19042018/01	RC8205	RC2030
RC19137008/01	RC19335003/120	

# 7-STAR<sup>★</sup>

## PH-1LC UNIVERSAL REMOTE CONTROL FOR PHILIPS TV



LCD  
LED

HDTV

SMART



Thanks for choosing this remote control. Please install the batteries and try. If it works well, no need to set. If it does not work, please refer to the following setting method. This remote control could save the setting when changing batteries.


**⚠ Before use this remote control, please read this manual as much as possible. It could directly control 99% models of PHILIPS TV brand, no need to set. If it doesn't work please choose one of the following setting ways to use.**



### ● A. INPUT CODE



**Step.1** Press and hold the key [ MUTE ] and [ POWER ] keys, after 3 seconds, the LED light will come on. Release the keys.

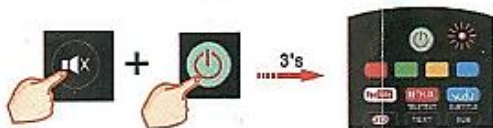

**Step.2** Enter the 3 digit code. If the code is right, the LED light will go off. If the code is wrong, the LED light will still be on. If this happens, try to enter the code again as there may have been an error the first time

CODE LIST:	001,002,003,004,005,006 007,008,009,010,011,012,013
------------	--



**Step.3** Please check the function of Remote . If it doesn't work well, please you can try one of the other codes and repeat the process from step 1.

[Note]: If you want to exit set, please press [MUTE] key.


# 7-STAR
 
## B. CODE INQUIRY



To know what codes the remote control is using:

**Step.1** Press and hold the key [ MUTE ] firstly, then press [ POWER ] key, after 3 seconds LED will light, release keys.



**Step.2** Input [9],[9],[0] with number keys. LED will flash 2 times and be off.



**Step.3** Press [ 1 ]/[ 2 ]/[ 3 ]. For example, Pressing [ 1 ] Key, LED will start to flash. The flashes times is the code's first number. If code number is [ 0 ], LED will not flash.

For example: Remote used [0.0.5] code before



## C. LEARNING FUNCTION

It's Suitable For IR Remote, Not Suitable For Bluetooth and Wireless Remote

**Step.1** Press and hold the key [ MUTE ] and [ VOL + ] about 5 seconds, the LED will be on. Release the them. It is ready to learn.



**Step.2** Point the original remote control to PH-1LC remote. The distance should be within 1~3cm.



**Step.3** Press any key of the original remote control, the Indicate on PH-1LC remote control will flash after receive code, release it. Then press the key on PH-1LC remote control. Indicator light flashes 2 times and keep. Please repeat Step.3 to continue learning other function keys.



**Step.4** After learning all the keys, please press and hold the key [ MUTE ] firstly, then press [ VOL - ], the LED will be off. The learning will be saved.



NOTE: During the learning process, if no key is pressed in 25 seconds the learning state will be exited without saving.

## D. One-button COPY(learn) function

Note: A and B are identical learning remotes.

A: The remote control that has been fully learned


B: Remote control that needs to copy

**Step.1** Align the head of remote control [ A ] with the head of remote control [ B ] at a distance of 1~3 cm and do not shake




**Step.2** Operation of B remote control:

Press [ MUTE ] key and number key [ 3 ] at the same time for more than 3 seconds. When the LED is light, release them. Remote is ready to copy

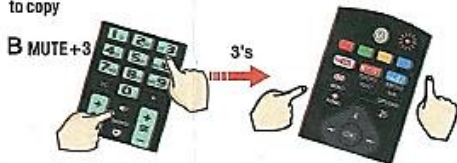

**Step.3** [ A ] remote control operation:

Press the remote control [ MUTE ] and number key [ 1 ] at the same time for 3s. When LED is light, then release the two keys. When the working lights of the two remote controllers are flashing. Copy function is working. When the LED light of two remotes flash three times slowly and then off. It means copy is completed.

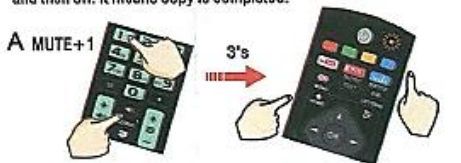

Note: Please check the function of B remote, if some keys not working, please repeat from Step.1~3  
If you want to exit set, please press [ MUTE ] and [ VOL - ] keys.

[ PLEASE KEEP IT PROPERLY FOR LATER USE ]